

ASSEMBLY INSTRUCTIONS

ITEM NO :



















DESCRIPTION: QUEEN BED/KING BED


PAGE 1 OF 5

Read instructions carefully prior to assembly.

Thank you for purchasing this quality product. Check carefully for small parts which may have come loose during shipment. Remove all components from pack and place top down on soft surface such as carpet or cloth to prevent scratching the finish. Identify and count all parts as specified below.

It is recommended to use two or more person during the assembly process.

HEADBOARD BOX (BOX 1 OF 2)								
LIST OF HARDWARE					LIST OF PARTS			
NO.	Description	Sketch	Size	Quantity	NO.	Description	Sketch	Quantity
1	Longer bolt		Ø 5/16 "X60mm	14 PCS	A	Headboard		1 PC
2	Full-thread bolt		Ø 5/16 "X80mm	8 PCS	B	Roll Slat (13pcs)		1 Set
3	Hex nut		16mmx13mmx13mm	8 PCS	SIDE RAIL BOX (BOX 2 OF 2)			
4	Spring washer		(Ø 5/16 " - RBW)	22 PCS	LIST OF PARTS			
5	Flat washer		(Ø 5/16 " - RBW)	22 PCS	NO.	Description	Sketch	Quantity
6	Allen key		(M5x75mmx30mm)	1 PC	C	Left Headboard Leg		1 PC
7	Open wrench		(12mm)	1 PC	D	Right Headboard Leg		1 PC
8	Screw		M4 x 30mm	15 PCS	E	Footboard		1 PC
9	Short Screw		M4 x 20mm	2 PCS	F	Side rail		2 PCS
					G	Center Rail		1 PC
					H	Support leg		3 PCS
					I	Leg		2 PCS

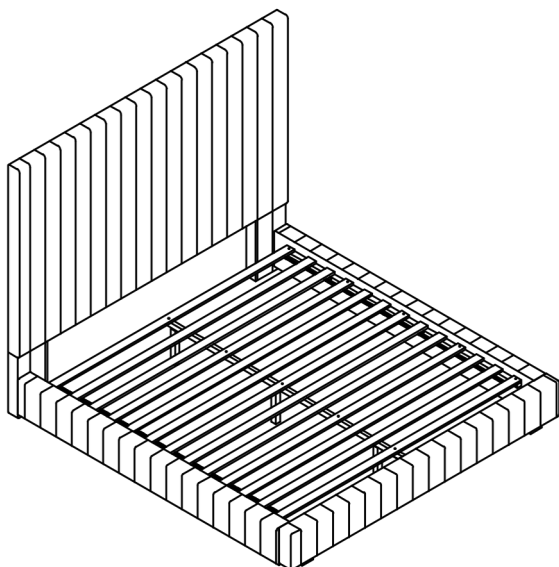


ASSEMBLY INSTRUCTIONS





ITEM NO :

DESCRIPTION: QUEEN BED/KING BED

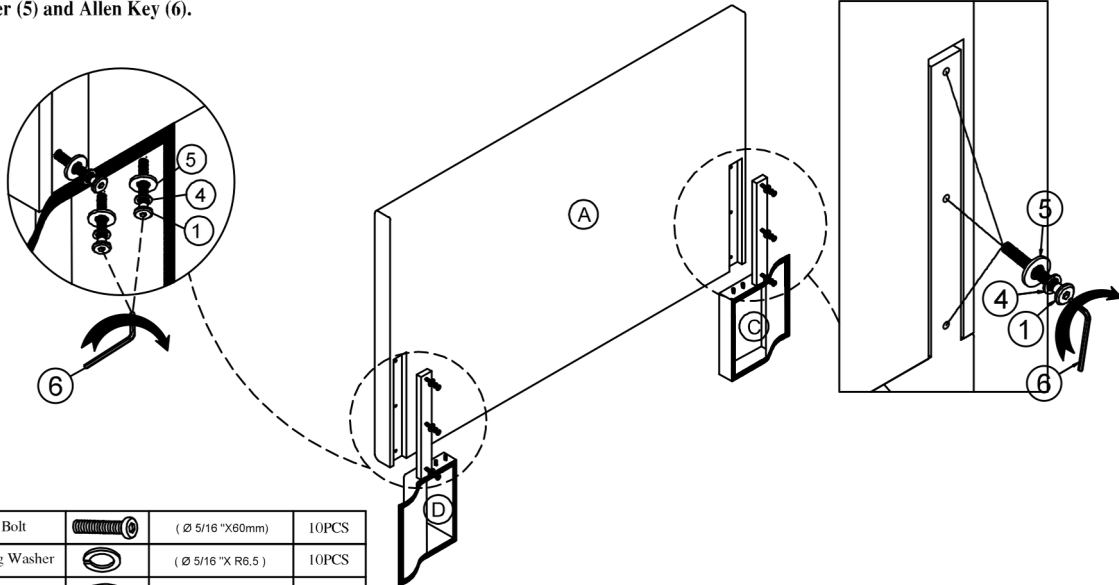
PAGE 2 OF 5





Step 1 : Attach the Headboard (A) to Left Front Leg (C) and Right Front Leg (D) by using Long Bolt (1) Spring Washer (4), Flat Washer (5) and Allen Key (6).

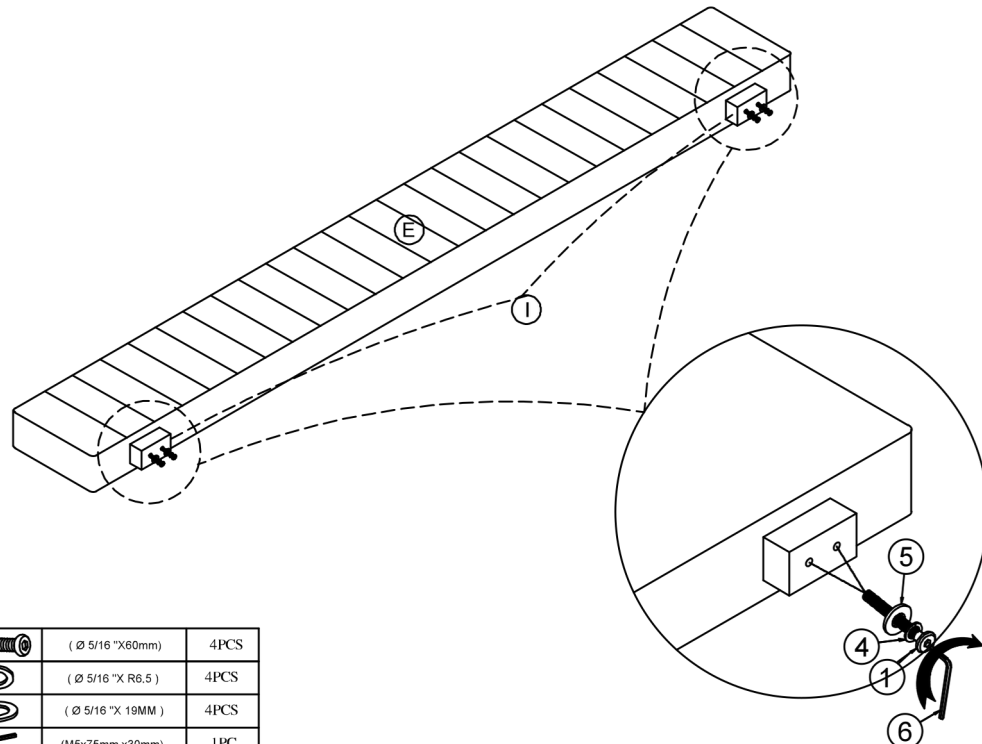

1	Long Bolt		(Ø 5/16 "X60mm)	10PCS
4	Spring Washer		(Ø 5/16 "X R6.5)	10PCS
5	Flat Washer		(Ø 5/16 "X 19MM)	10PCS
6	Allen Wrench		(M5x75mm x30mm)	1PC

Step 2 : Attach Leg (I) to Footboard (E) by using Long Bolt (1) Spring Washer (4), Flat Washer (5) and Allen Key (6).



1	Long Bolt		(Ø 5/16 "X60mm)	4PCS
4	Spring Washer		(Ø 5/16 "X R6.5)	4PCS
5	Flat Washer		(Ø 5/16 "X 19MM)	4PCS
6	Allen Wrench		(M5x75mm x30mm)	1PC

Made In Vietnam


ASSEMBLY INSTRUCTIONS






ITEM NO :

DESCRIPTION: QUEEN BED/KING BED

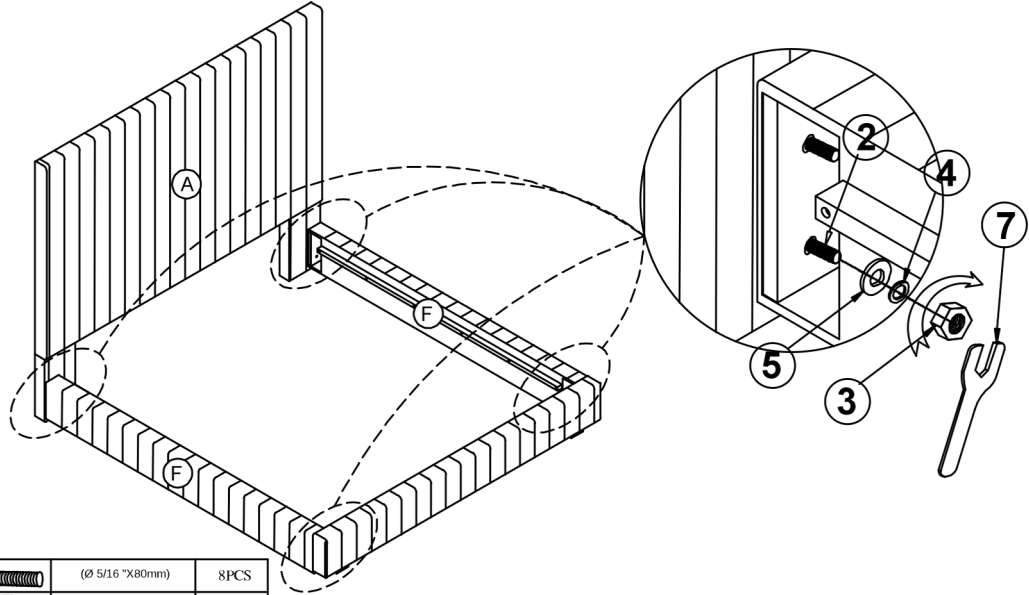
PAGE 3 OF 5

Step 3 : Attach Bed side rail (F) to Headboard (A) and Footboard (E) by using Full-thread bolt (2), Hex nut (3), Spring washer (4), Flat washer (5) and Open wrench (7)



2	Full-thread bolt		(Ø 5/16 "X80mm)	8PCS
3	Hex nut		(16mmx13mmx13mm)	8PCS
4	Spring Washer		(Ø 5/16 "X R6.5)	8PCS
5	Flat Washer		(Ø 5/16 "X 19MM)	8PCS
7	Open wrench		(12mm)	1PC

Step 4 : Attach Support legs (H) to Center Rail (G)

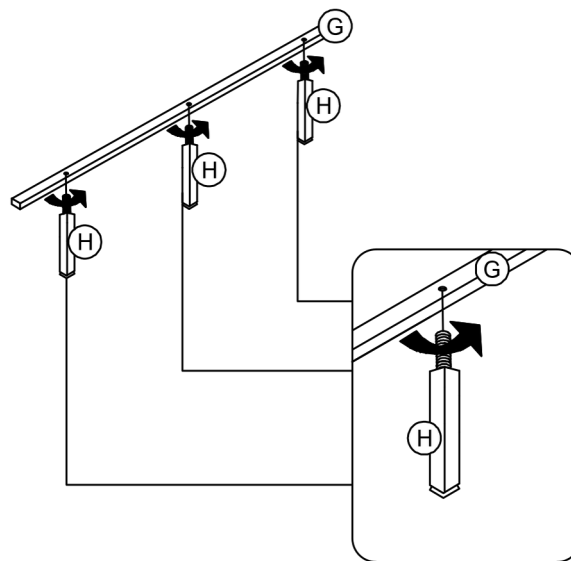

Made In Vietnam


ASSEMBLY INSTRUCTIONS


ITEM NO :

DESCRIPTION: QUEEN BED/KING BED


PAGE 4 OF 5


Step 5 : Attach Center Rail (G) to Footboard (E) by using Short Screw (9)

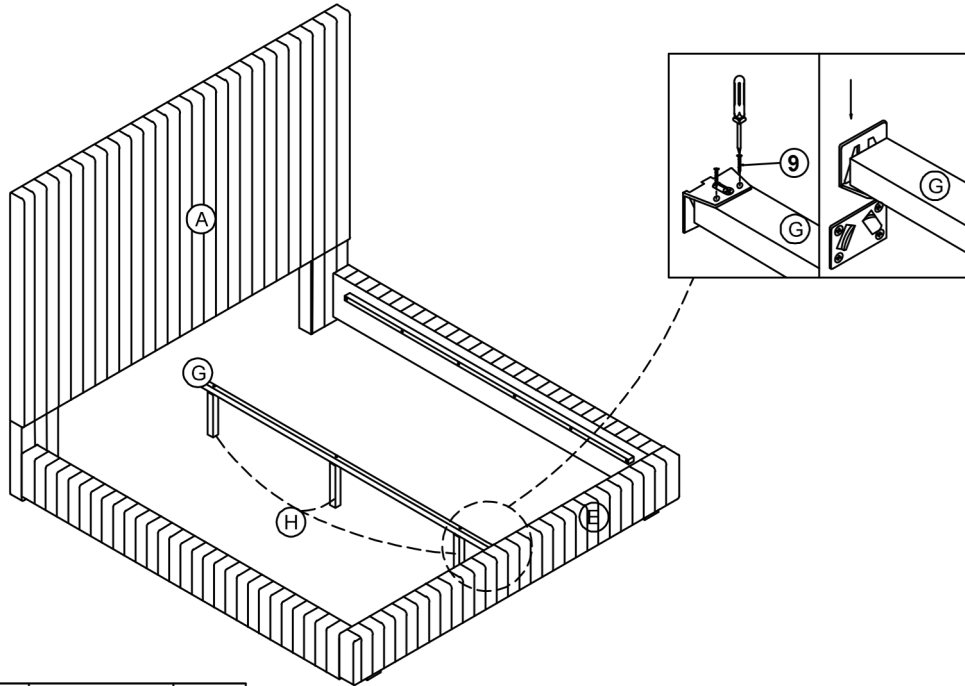

9	Flat Head Screw		(M4x30mm)	2PCS
---	-----------------	---	------------	------

Step 6 : Attach Screw (8) to Roll Slat (B)

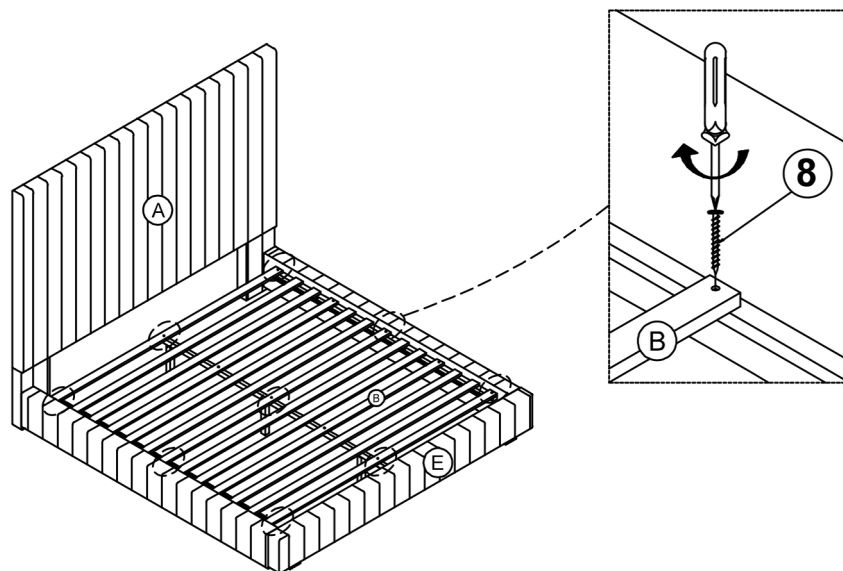

8	Flat Head Screw		(M4x30mm)	9PCS
---	-----------------	---	------------	------


ASSEMBLY INSTRUCTIONS

ITEM NO :

DESCRIPTION: QUEEN BED/KING BED

PAGE 5 OF 5

Step 7 : Completed

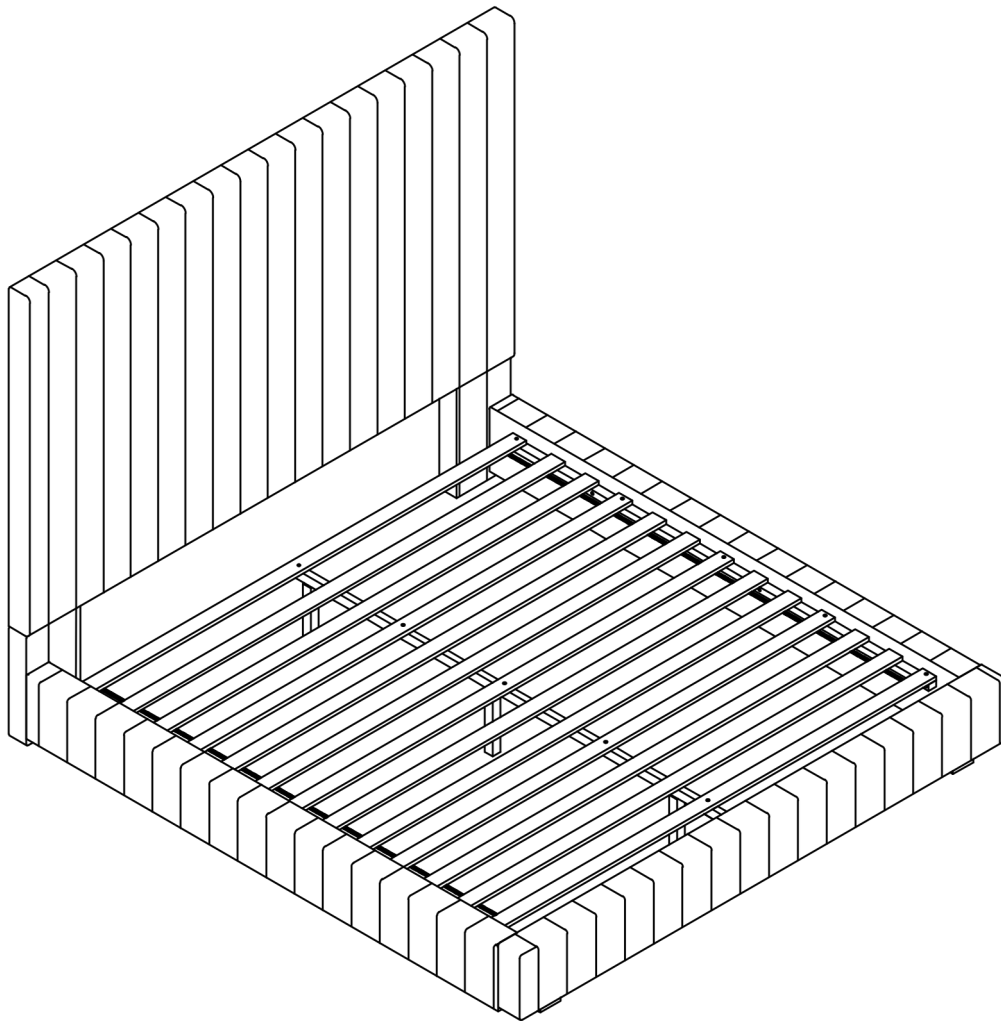

Made In Vietnam